


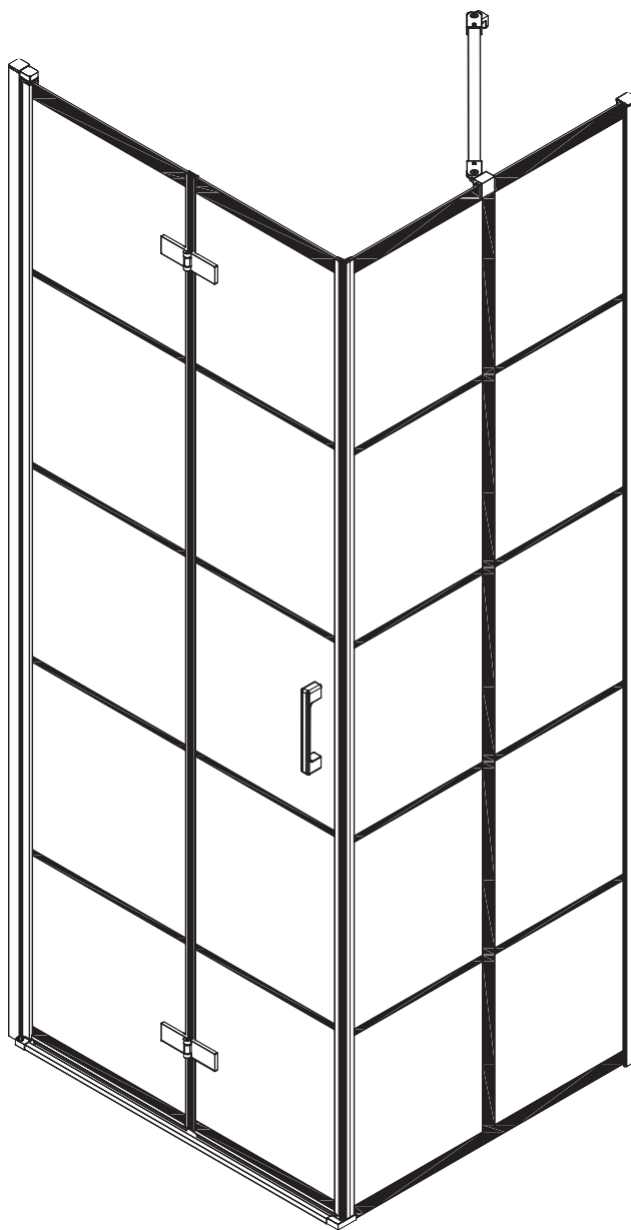


INSTRUCȚIUNI DE INSTALARE

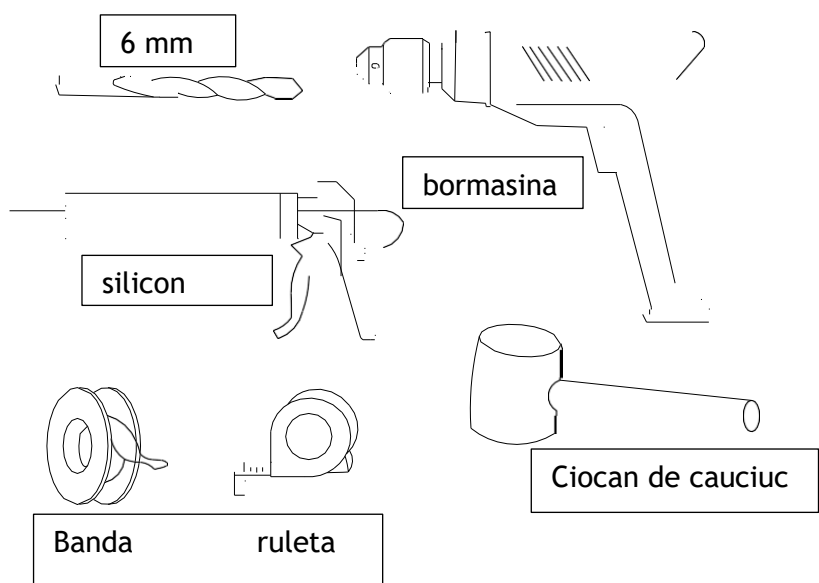



CABINĂ DE DUȘ
MOLIER NEGRU

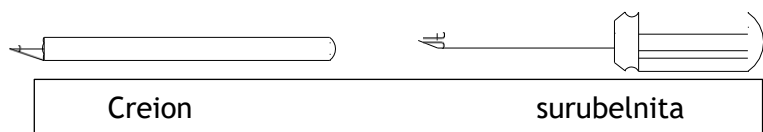

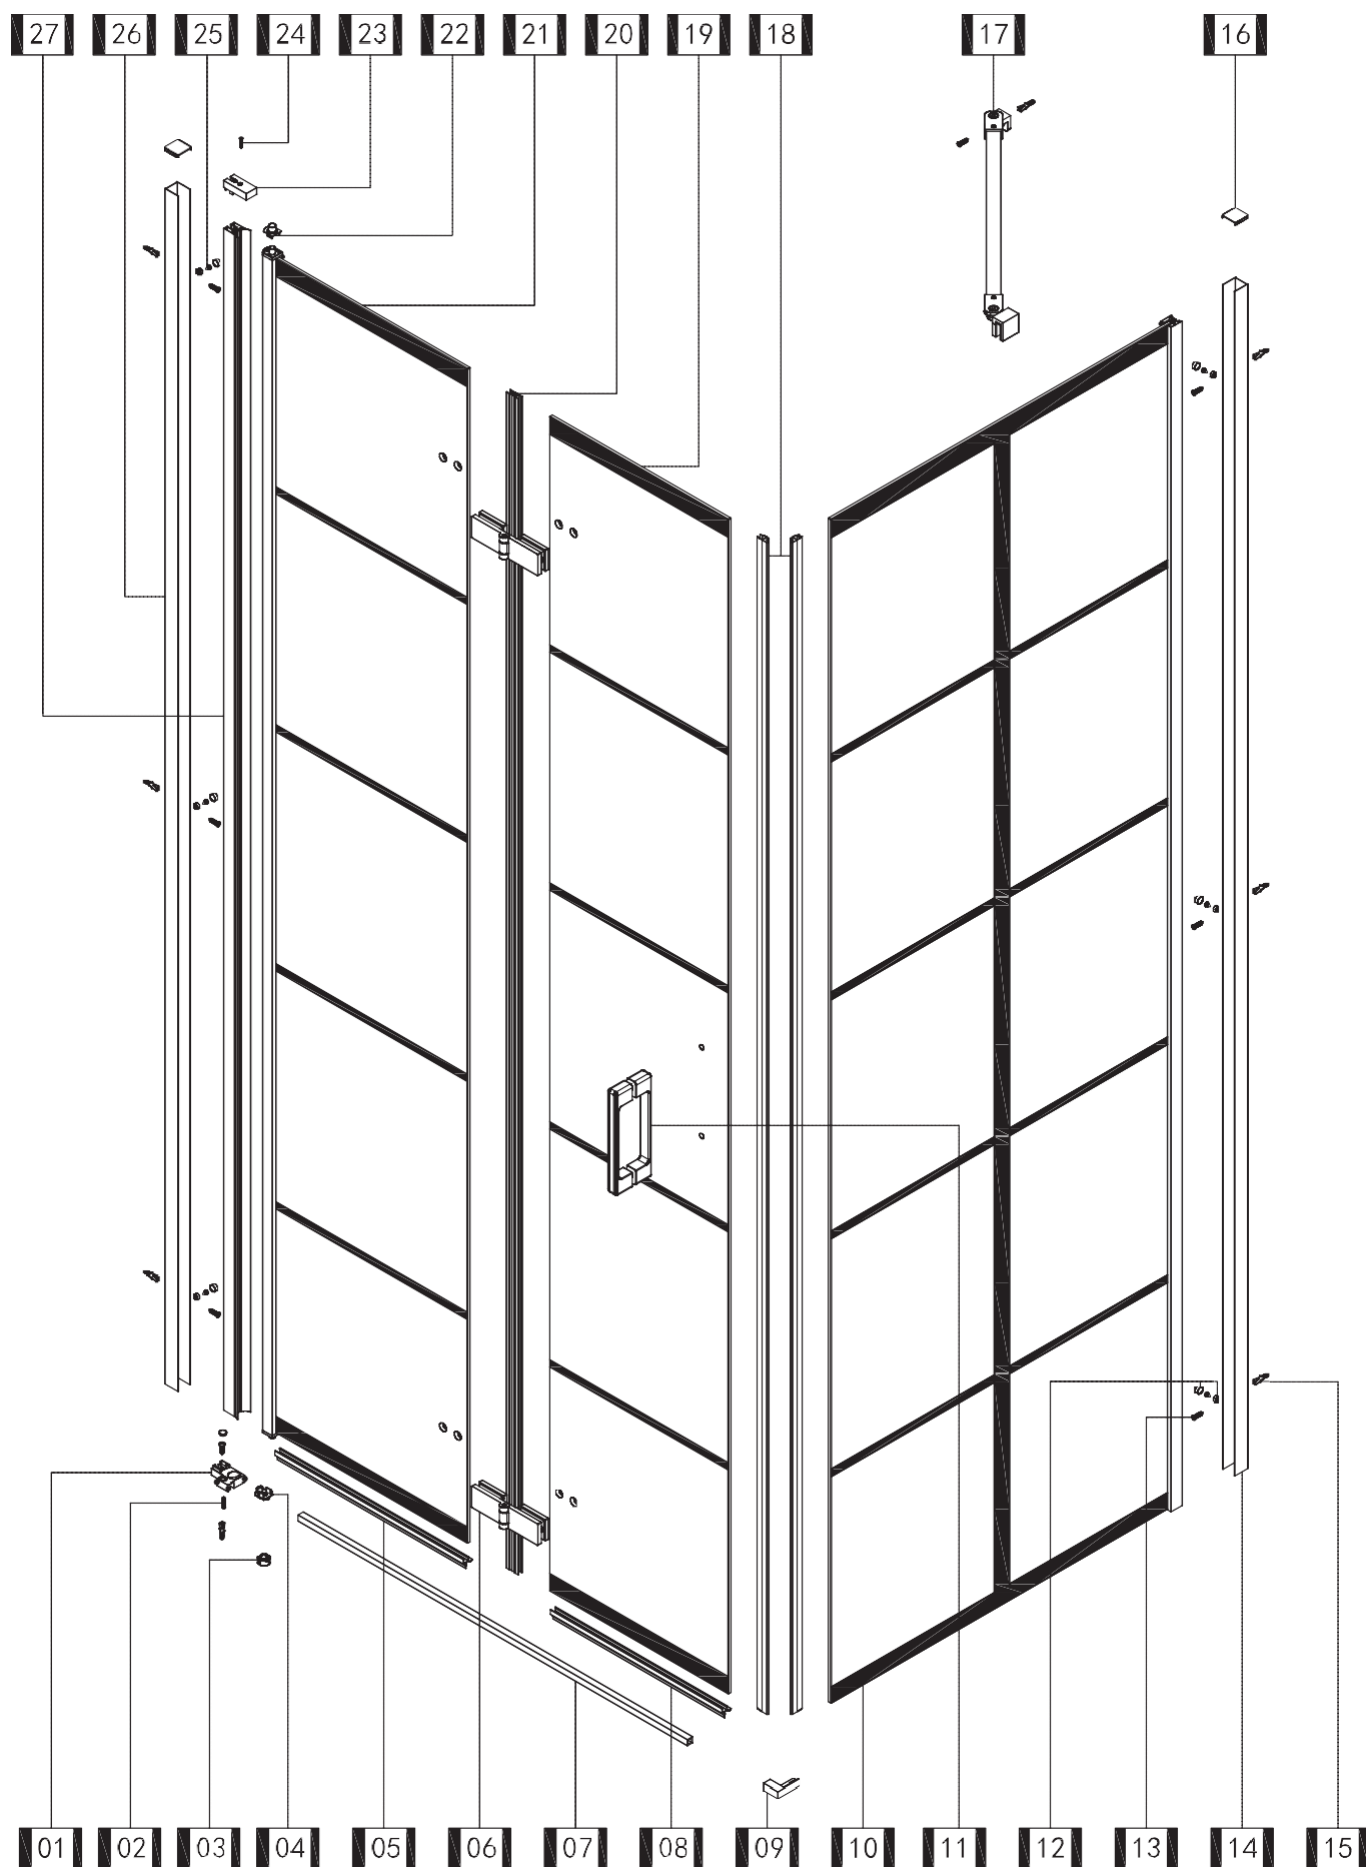

PĂRȚI

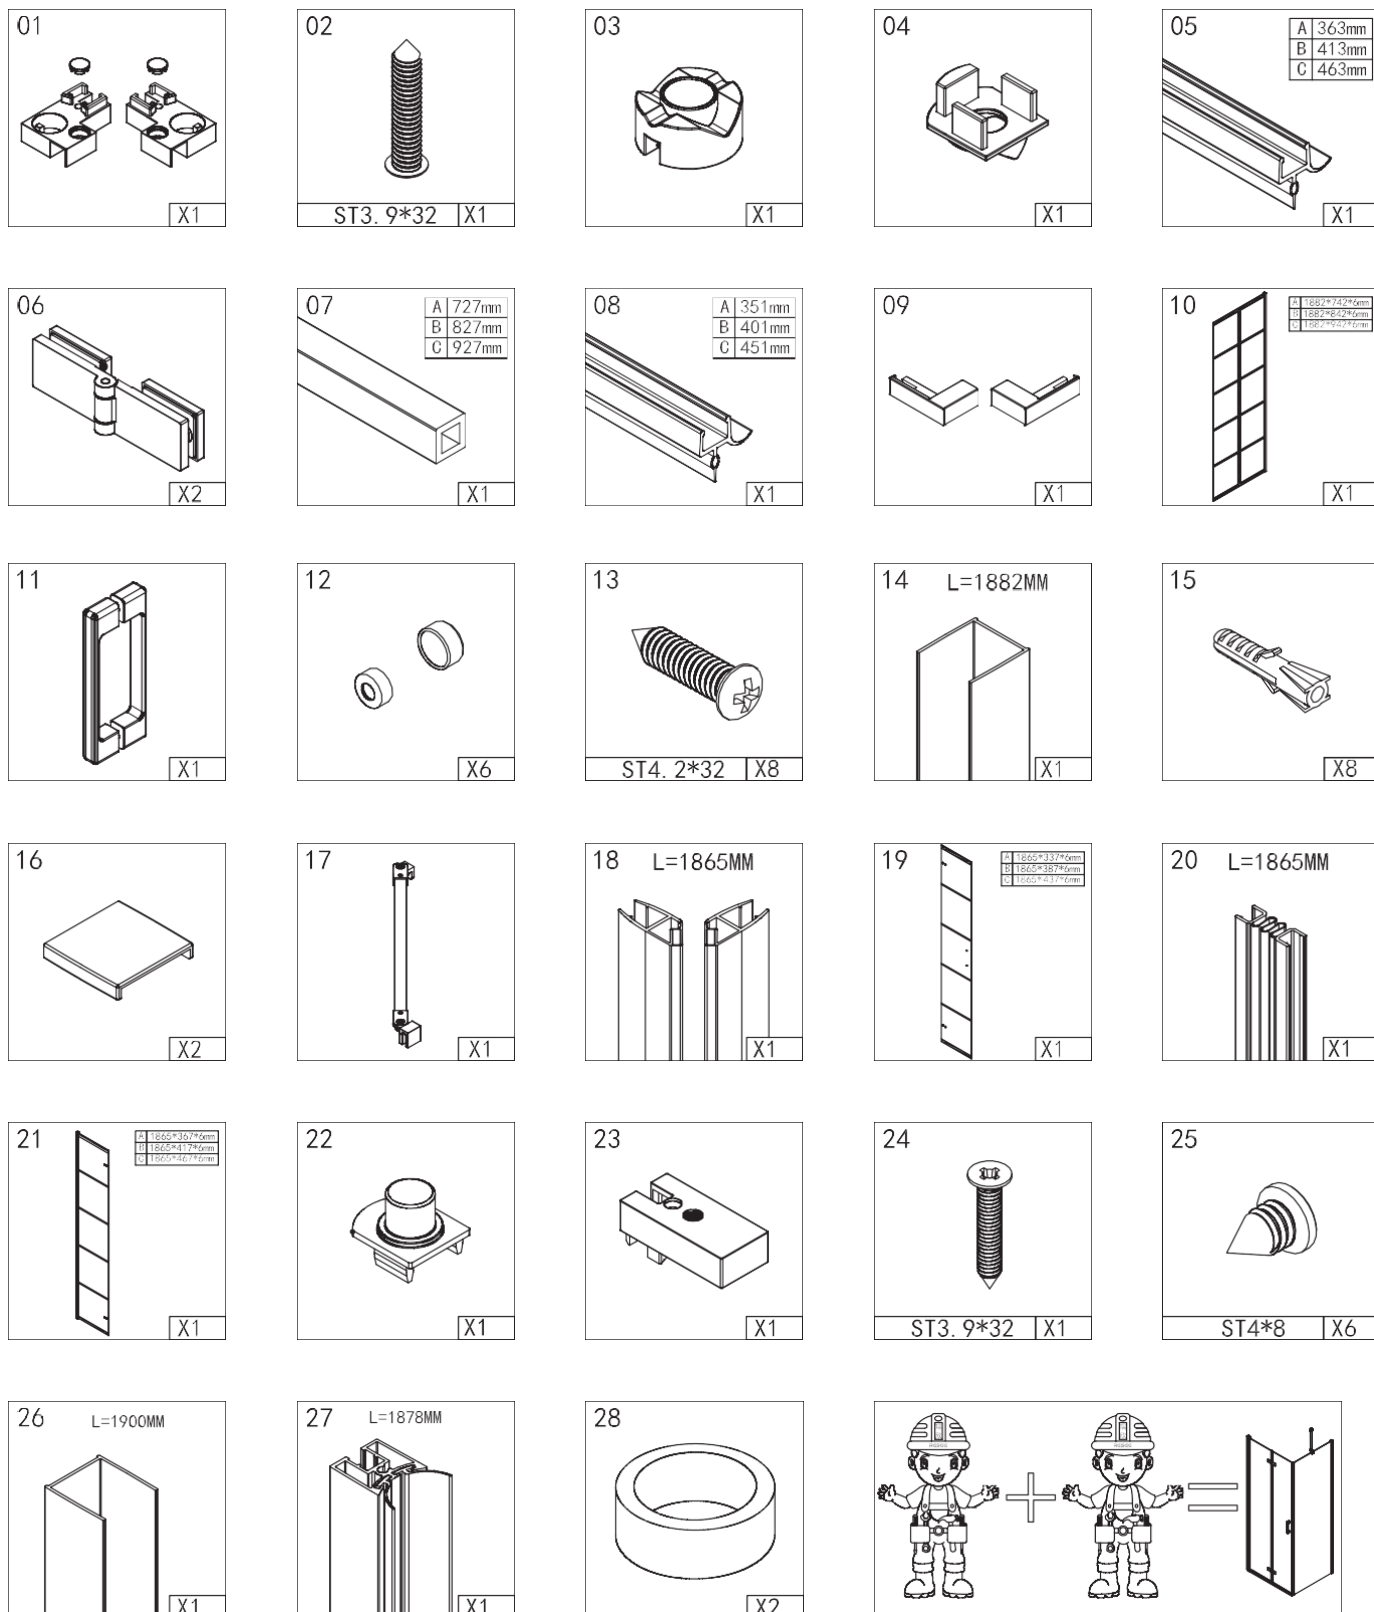

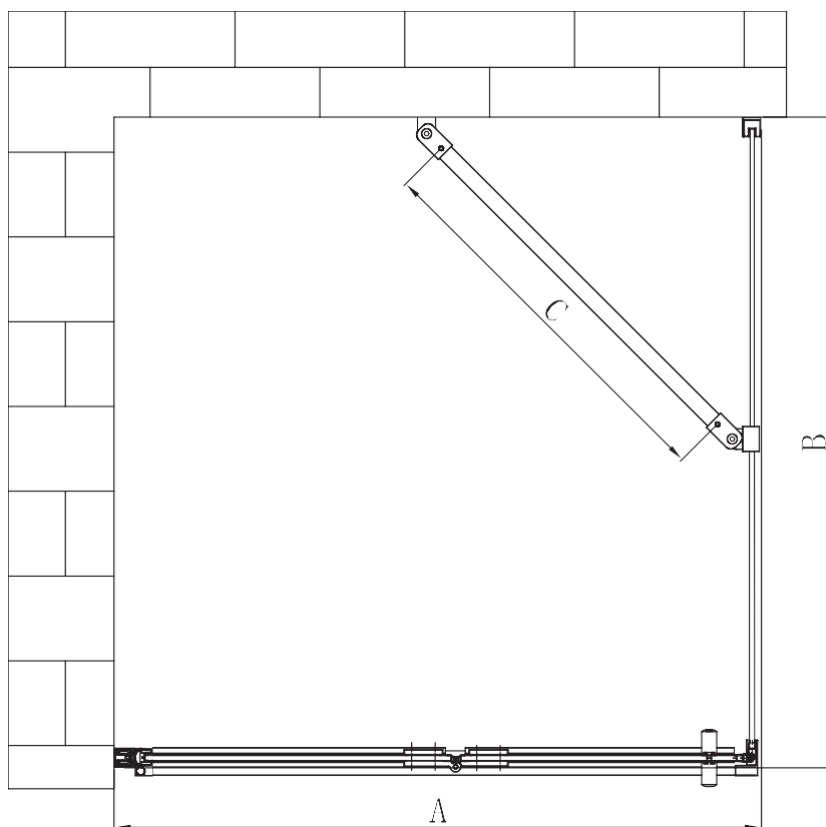

A	B	C
775~785	780~790	495~505
875~885	880~890	495~505
975~985	980~990	495~505

